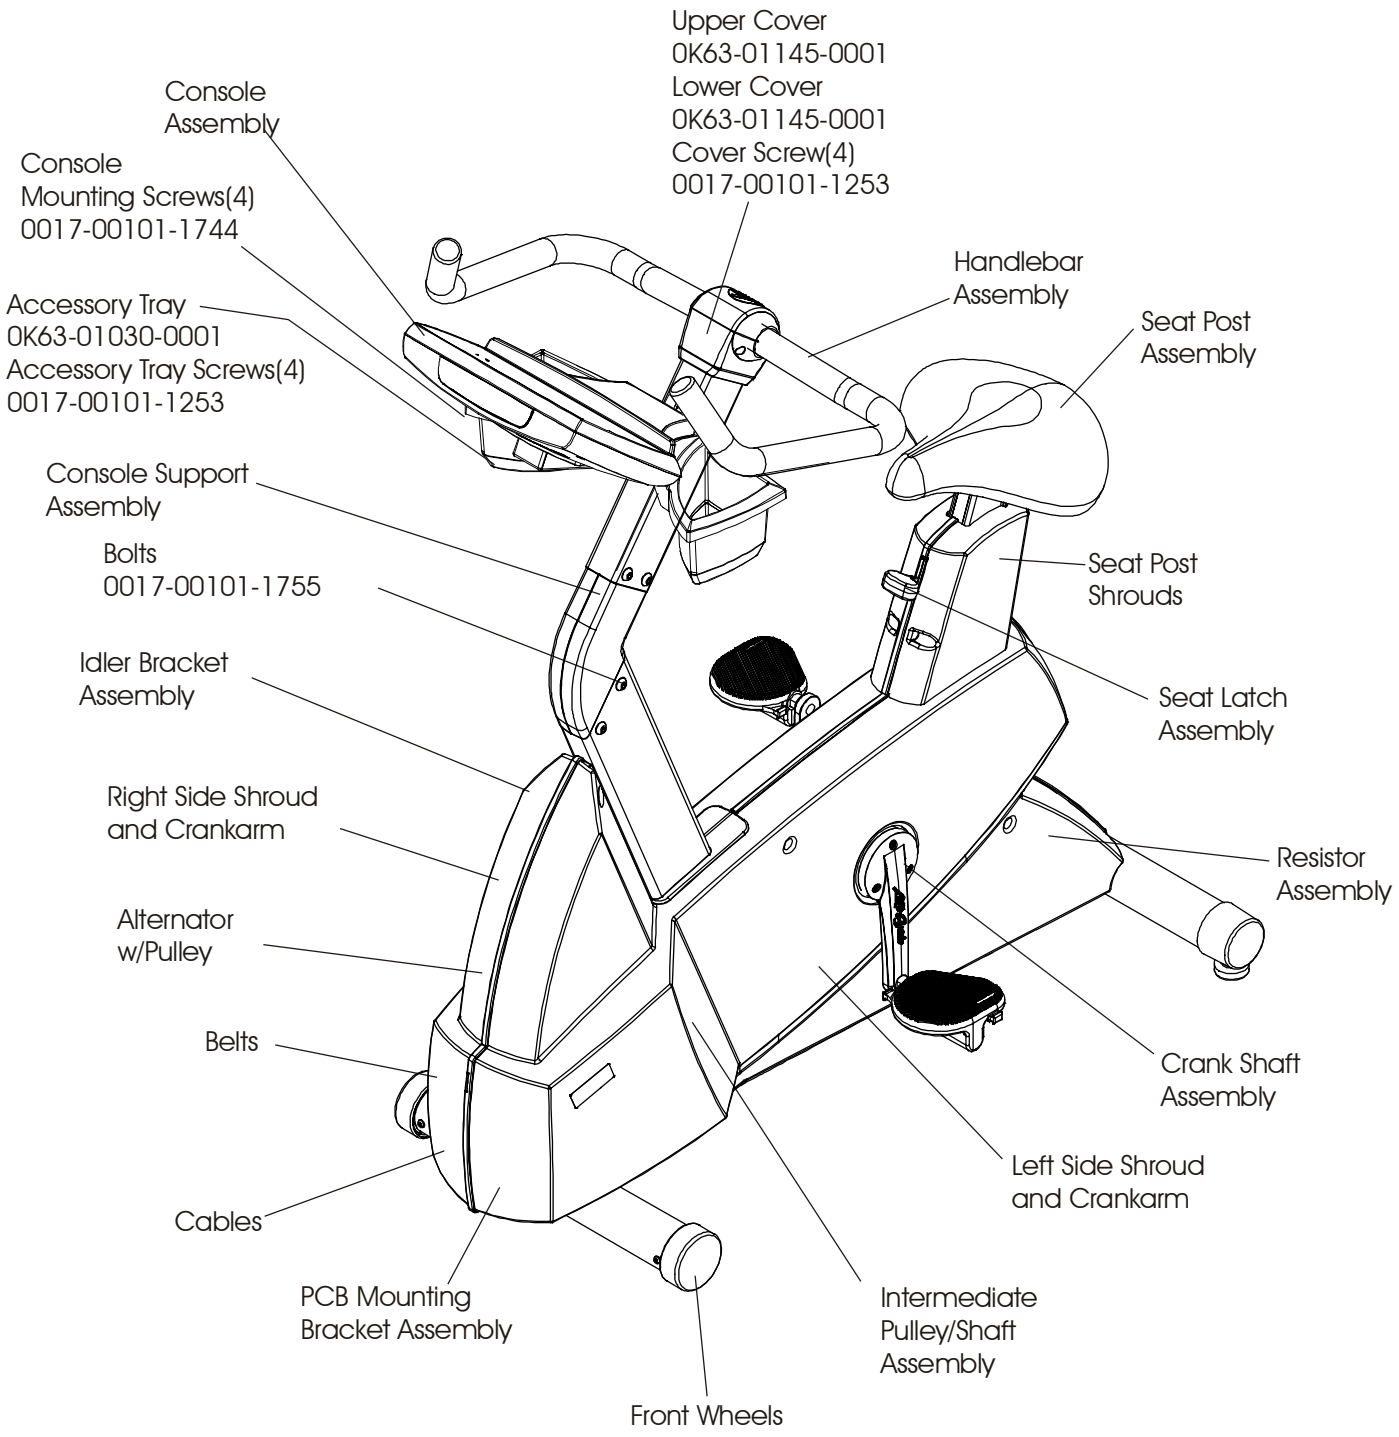

Description	Part Number
Service Manual	M051-00K63-A069
Operators Manual	M051-00K63-A068
Network C-Safe Kit	GK63-00002-0003
Hardware Bag	GK63-00002-0044

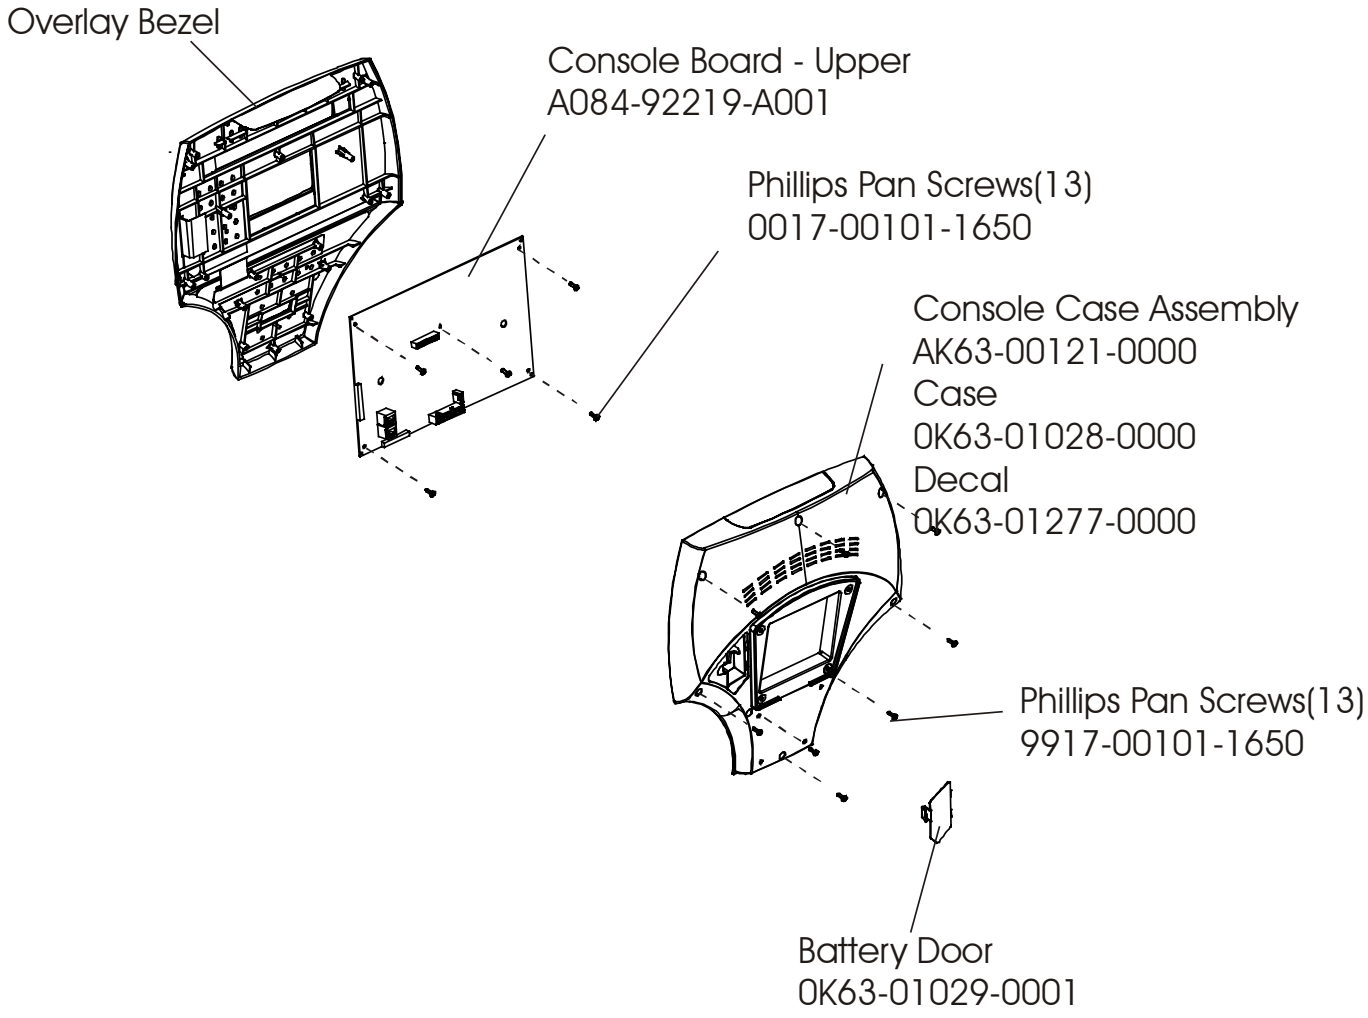

Console Assembly	Overlay Bezel
AK63-00161-0001 Eng Met	AK63-00166-0001 Eng Met
AK63-00161-0003 Ger Met	AK63-00166-0003 Ger Met
AK63-00161-0004 Spn Met	AK63-00166-0004 Spn Met
AK63-00161-0006 Jap Met	AK63-00166-0006 Jap Met
AK63-00161-0007 Frn Met	AK63-00166-0007 Frn Met
AK63-00161-0008 Itl Met	AK63-00166-0008 Itl Met
AK63-00161-0009 Dut Met	AK63-00166-0009 Dut Met
AK63-00161-0010 Por Met	AK63-00166-0010 Por Met

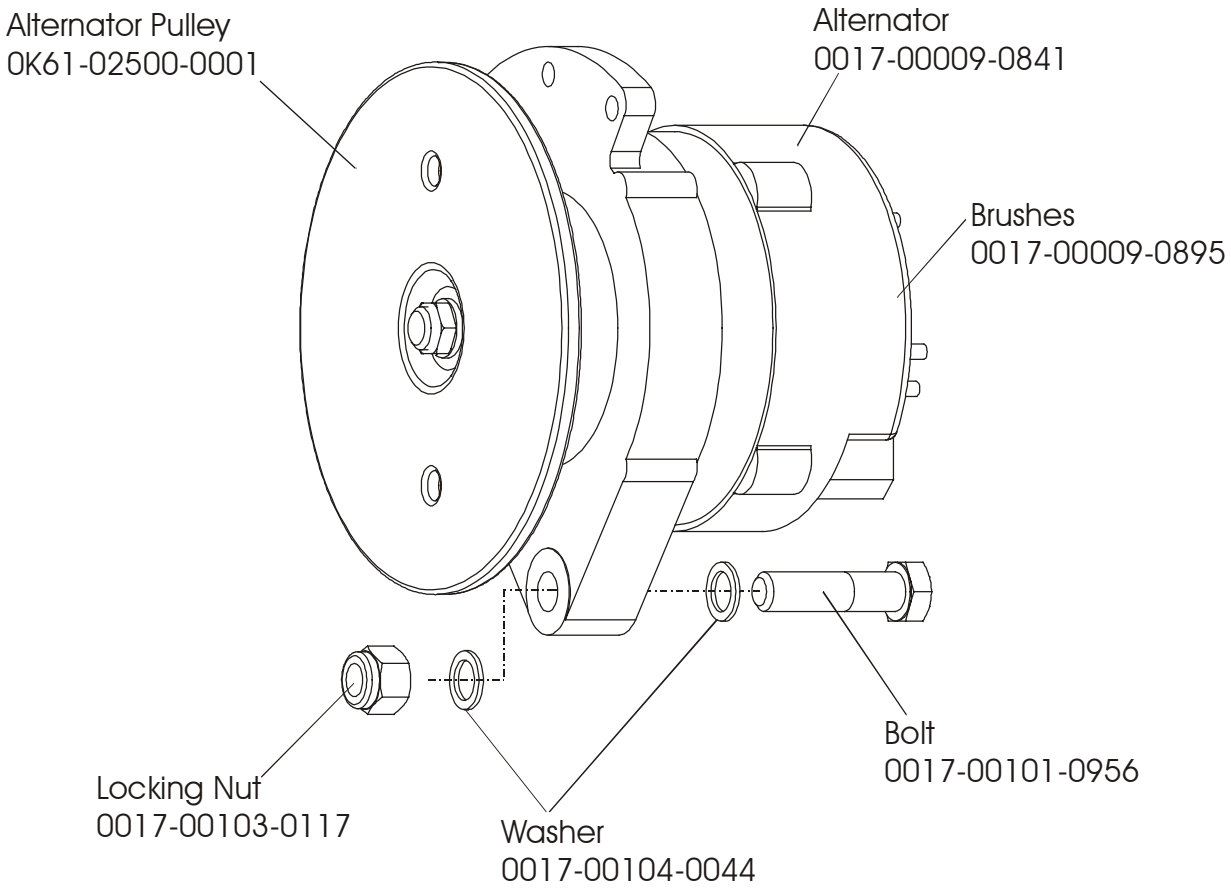
Alternator Pulley
0K61-02500-0001
Alternator
0017-00009-0841
Brushes
0017-00009-0895
Bolt
0017-00101-0956
Locking Nut
0017-00103-0117
Washer
0017-00104-0044

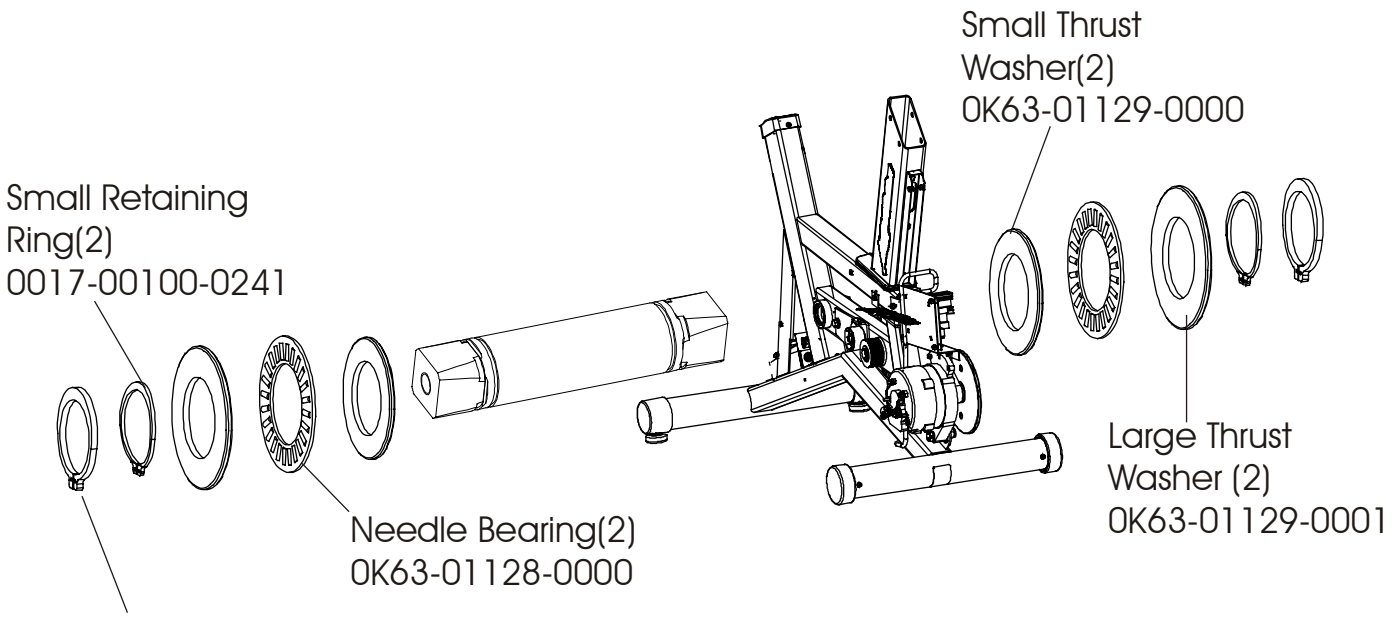

Crank Shaft & Bearing Kit - GK63-00002-0006
(All items on this page are included in the kit.)

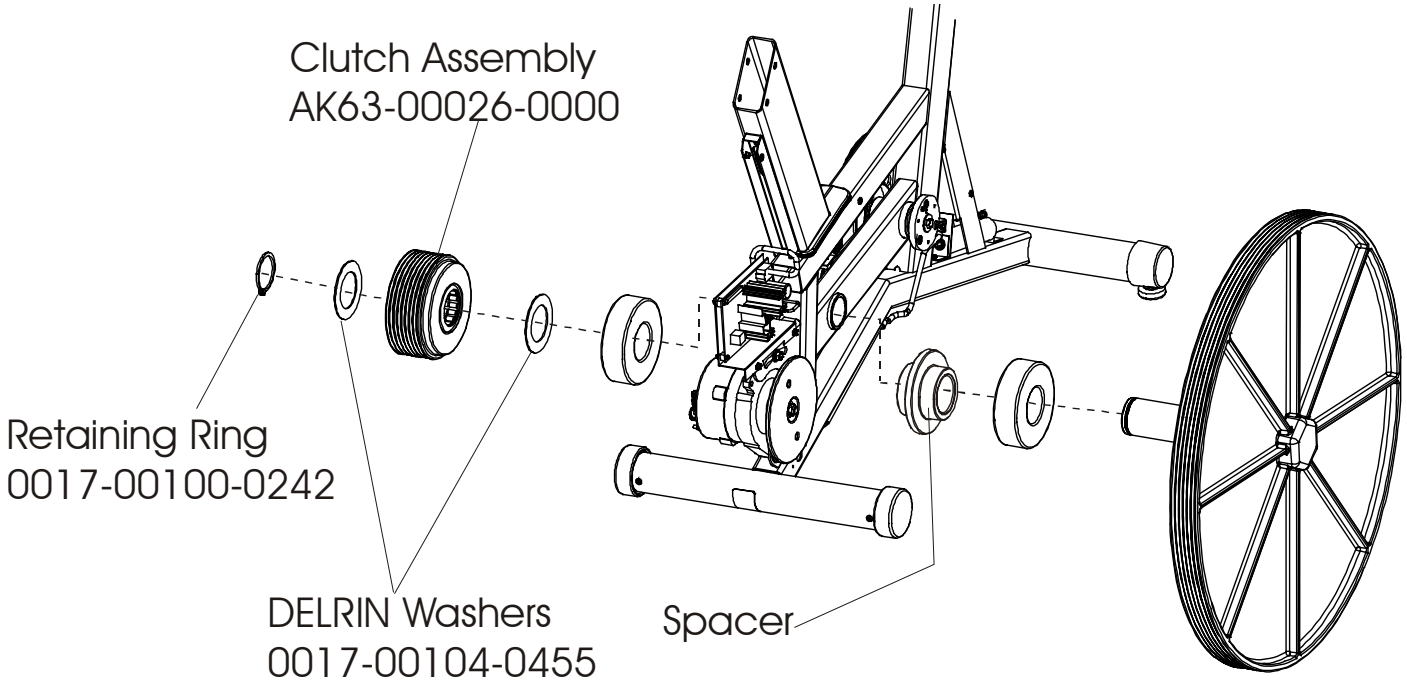

Intermediate Shaft & Bearing Kit - GK63-00002-0007
(All items on this page are included in the kit.)

Seat Latch Assy – AK63-00043-0001

S/N LCB100001

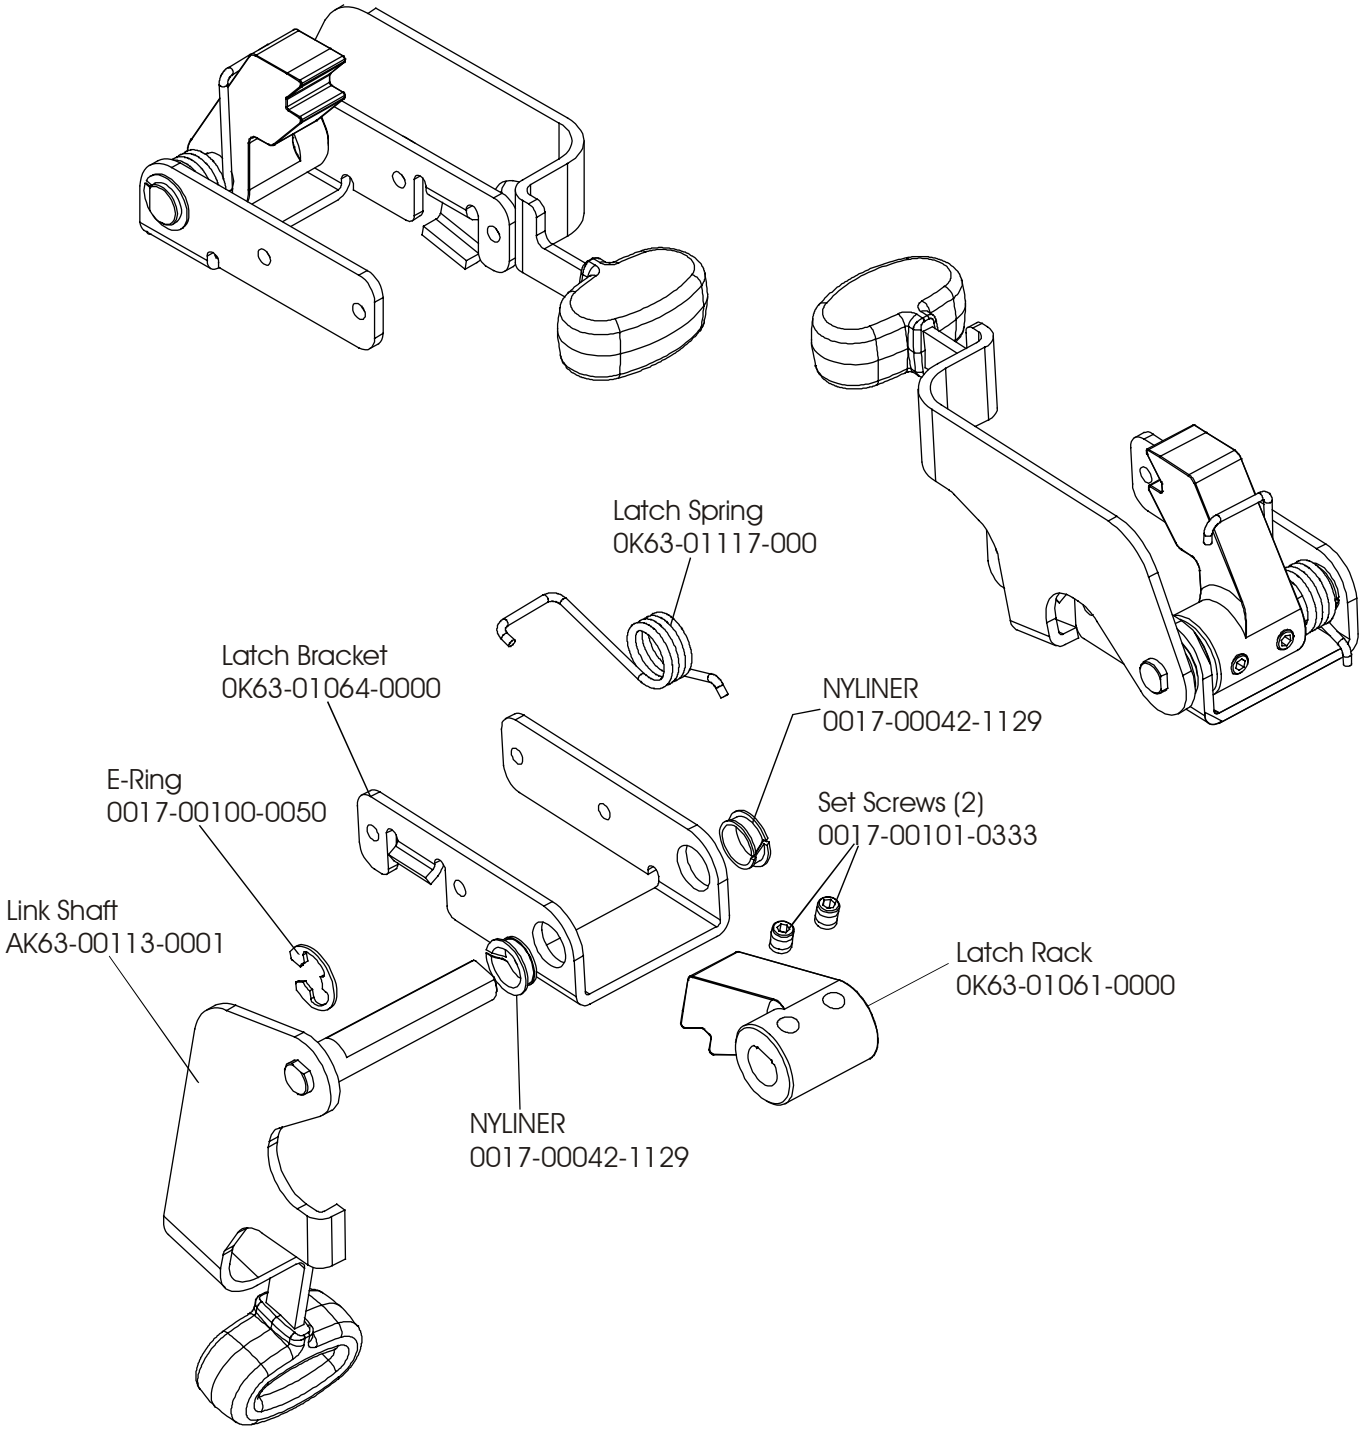

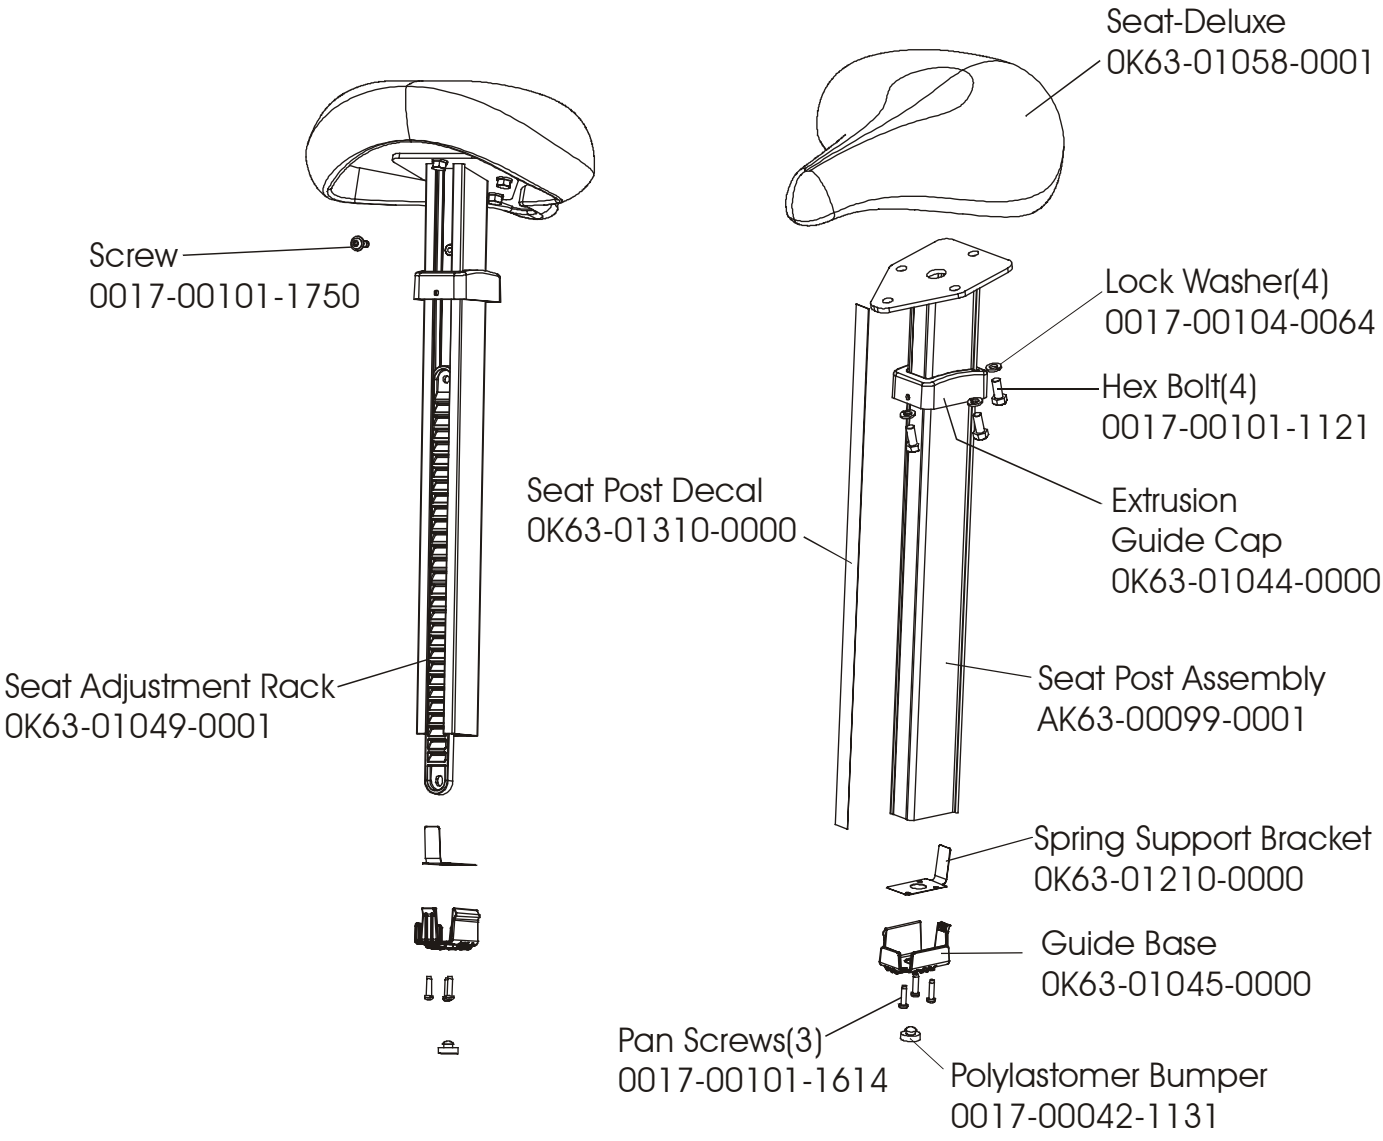
Seat-Deluxe
0K63-01058-0001
Screw
0017-00101-1750
Lock Washer(4)
0017-00104-0064
Hex Bolt(4)
0017-00101-1121
Seat Post Decal
0K63-01310-0000
Extrusion
Guide Cap
0K63-01044-0000
Seat Adjustment Rack
0K63-01049-0001
Seat Post Assembly
AK63-00099-0001
Spring Support Bracket
0K63-01210-0000
Guide Base
0K63-01045-0000
Pan Screws(3)
0017-00101-1614
Polylastomer Bumper
0017-00042-1131

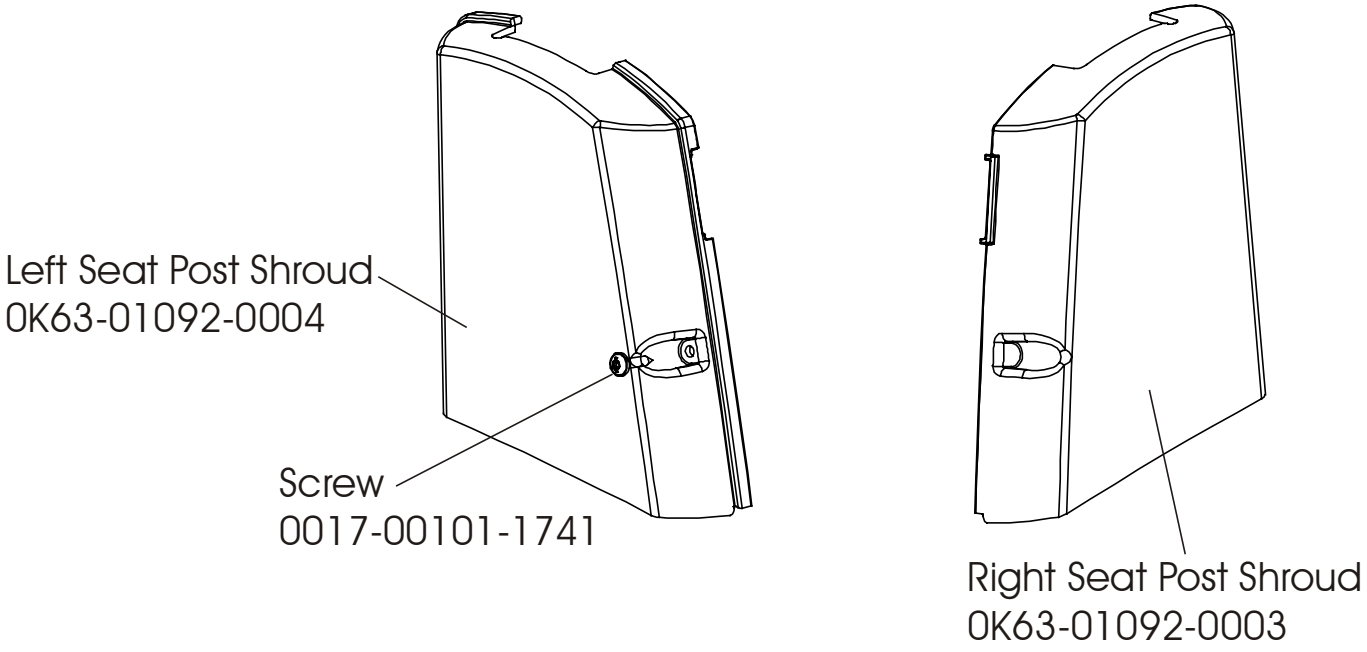
Left Seat Post Shroud
0K63-01092-0004
Screw
0017-00101-1741
Right Seat Post Shroud
0K63-01092-0003

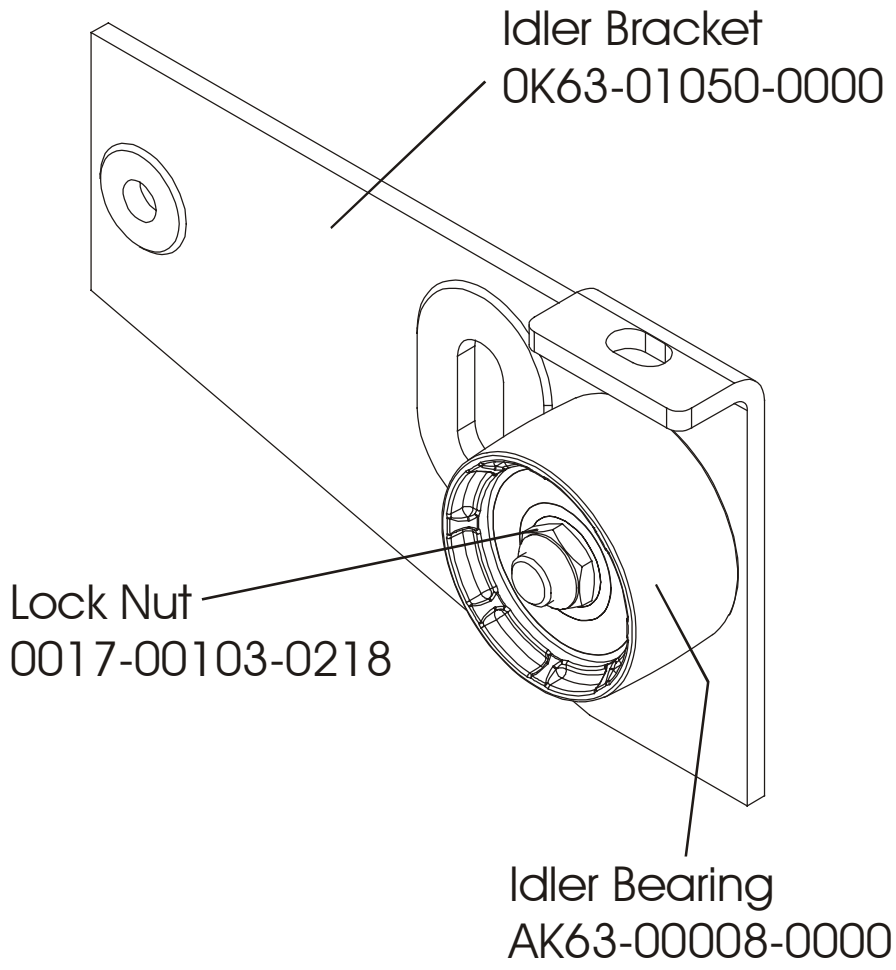
Idler Bracket
0K63-01050-0000
Lock Nut
0017-00103-0218
Idler Bearing
AK63-00008-0000

Console Support Assembly AK63-00065-0001

S/N LCB100001

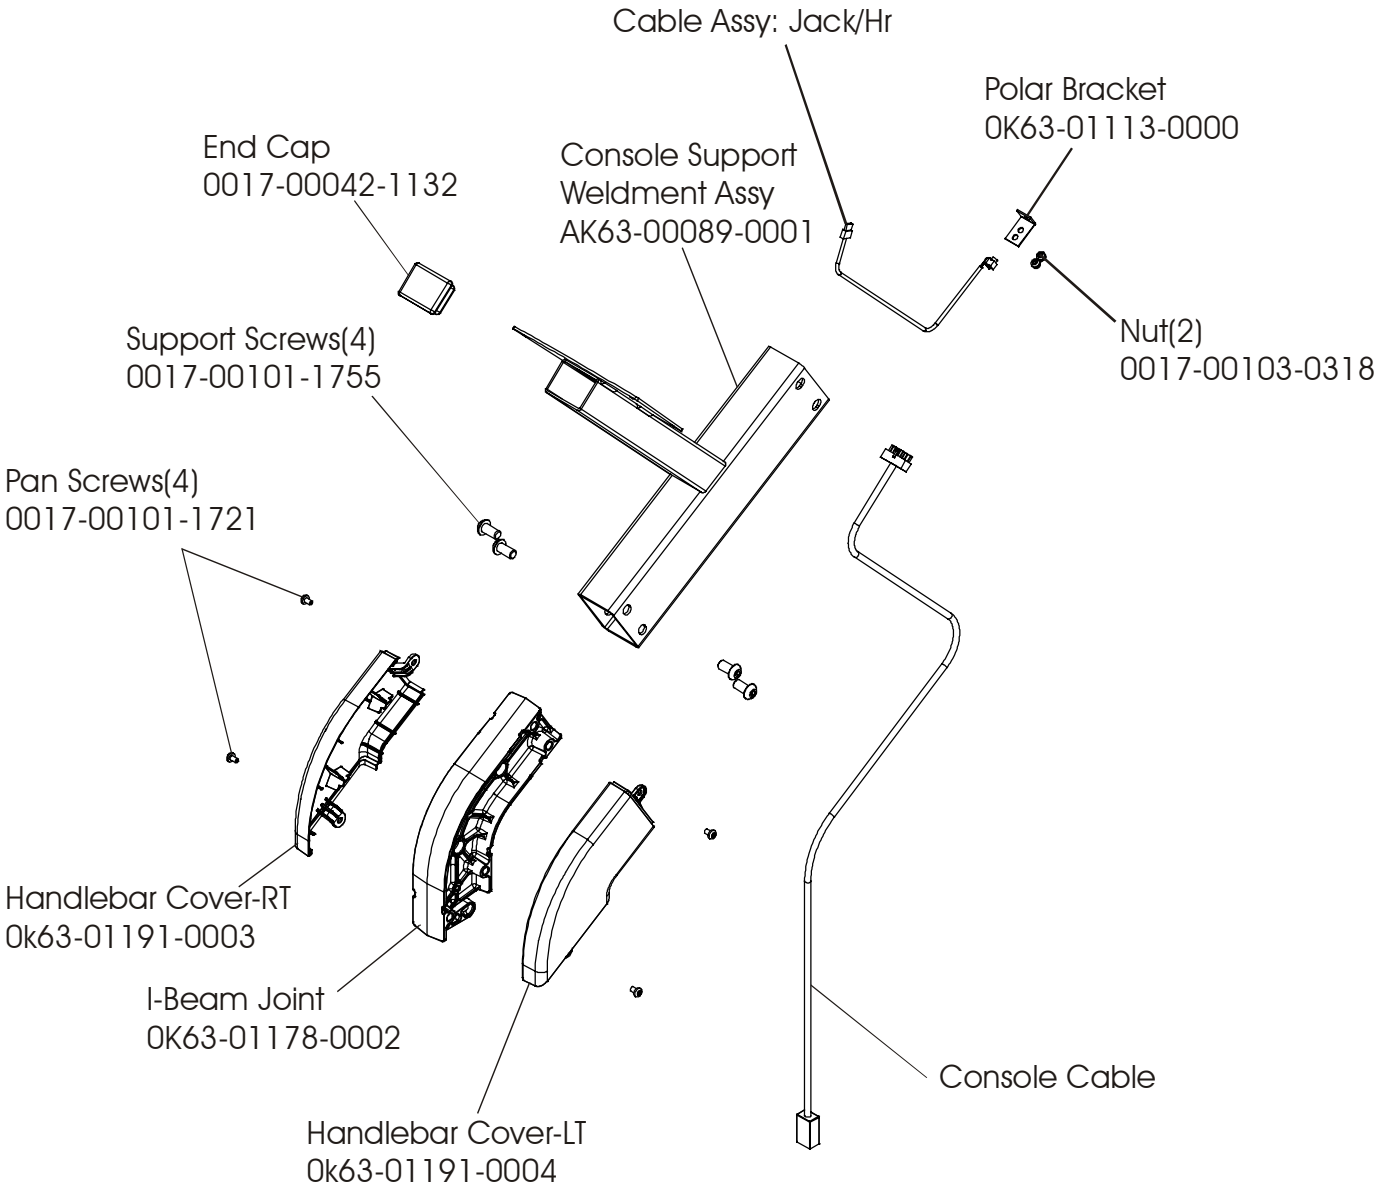

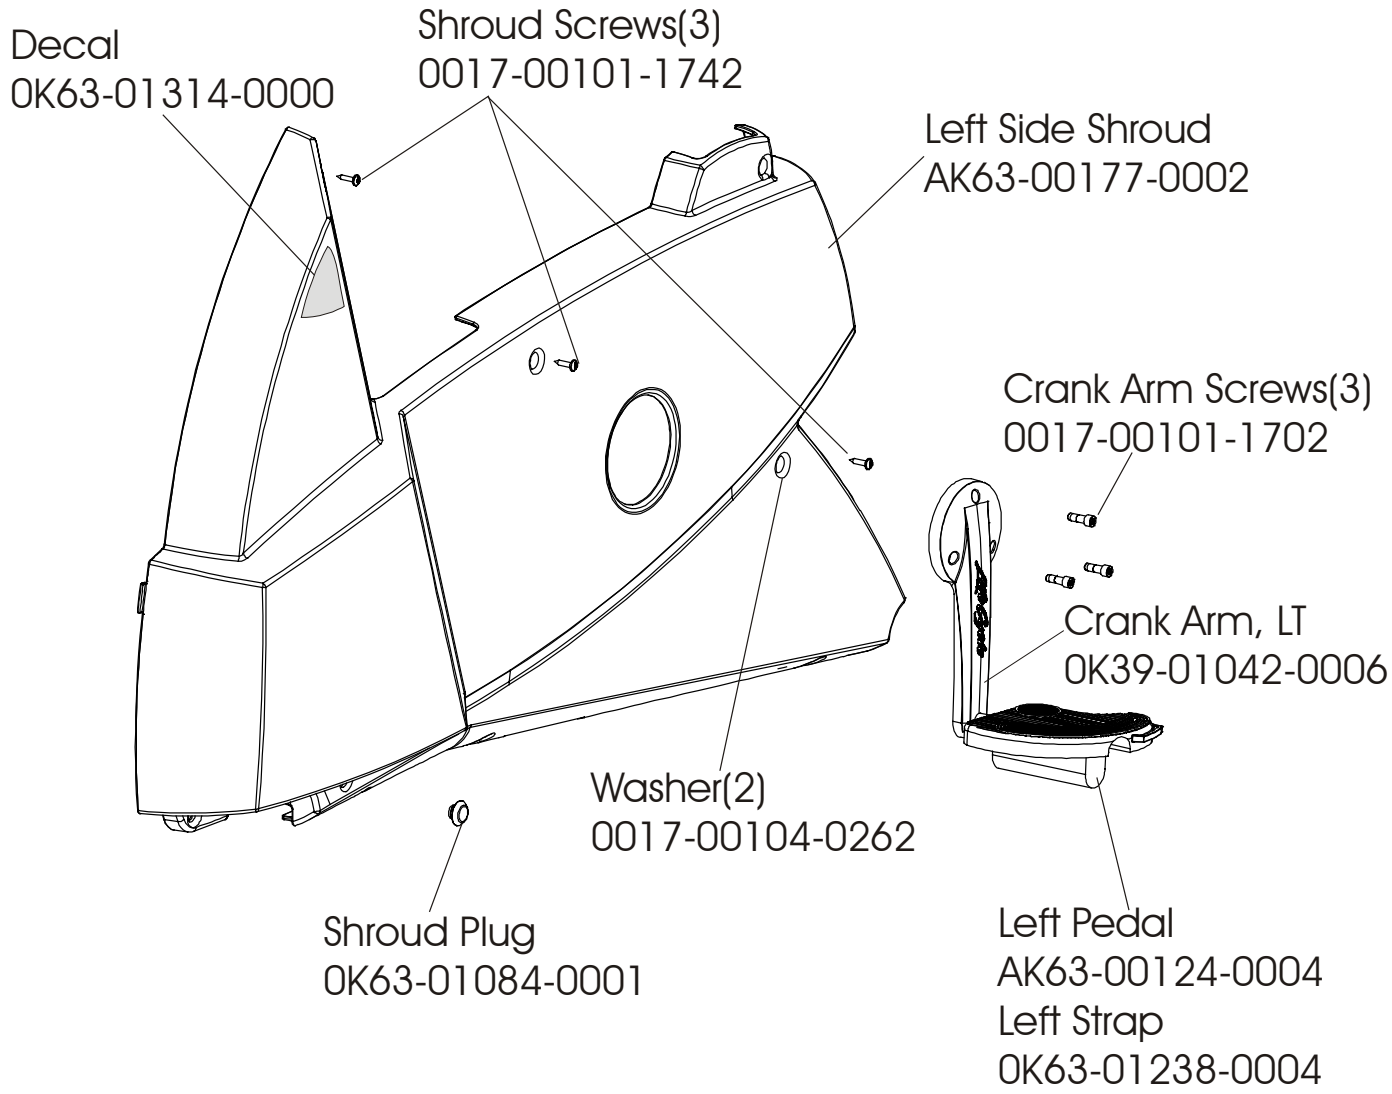
Decal
0K63-01314-0000
Shroud Screws(3)
0017-00101-1742
Left Side Shroud
AK63-00177-0002
Crank Arm Screws(3)
0017-00101-1702
Crank Arm, LT
0K39-01042-0006
Washer(2)
0017-00104-0262
Shroud Plug
0K63-01084-0001
Left Pedal
AK63-00124-0004
Left Strap
0K63-01238-0004

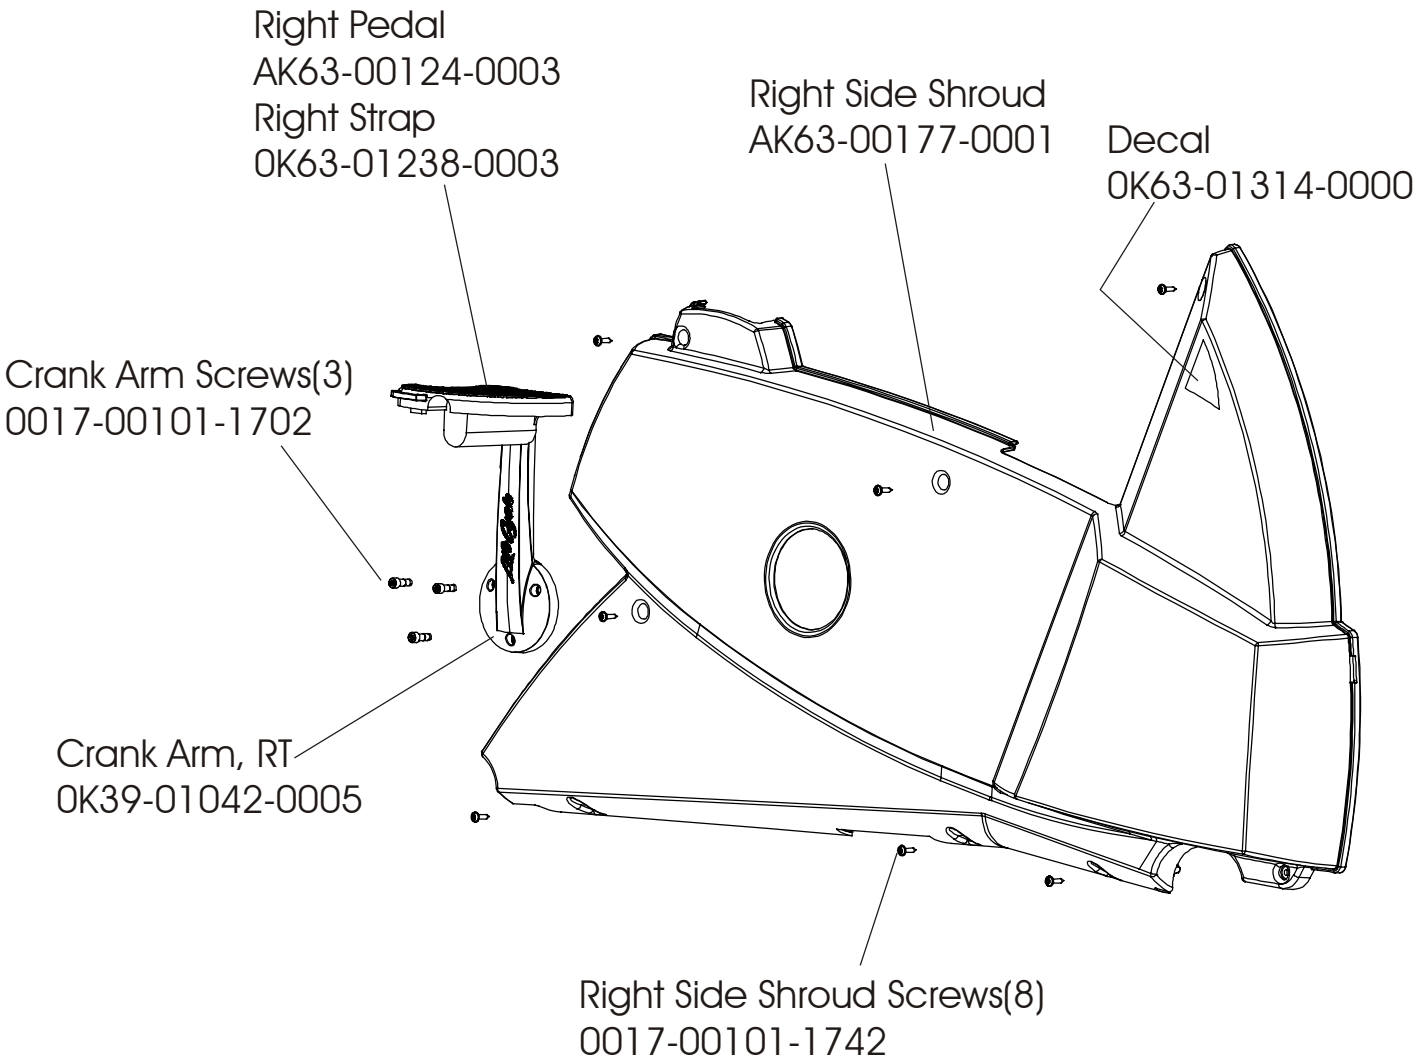
Right Pedal
AK63-00124-0003
Right Strap
0K63-01238-0003
Right Side Shroud
AK63-00177-0001
Decal
0K63-01314-0000
Crank Arm Screws(3)
0017-00101-1702
Crank Arm, RT
0K39-01042-0005
Right Side Shroud Screws(8)
0017-00101-1742

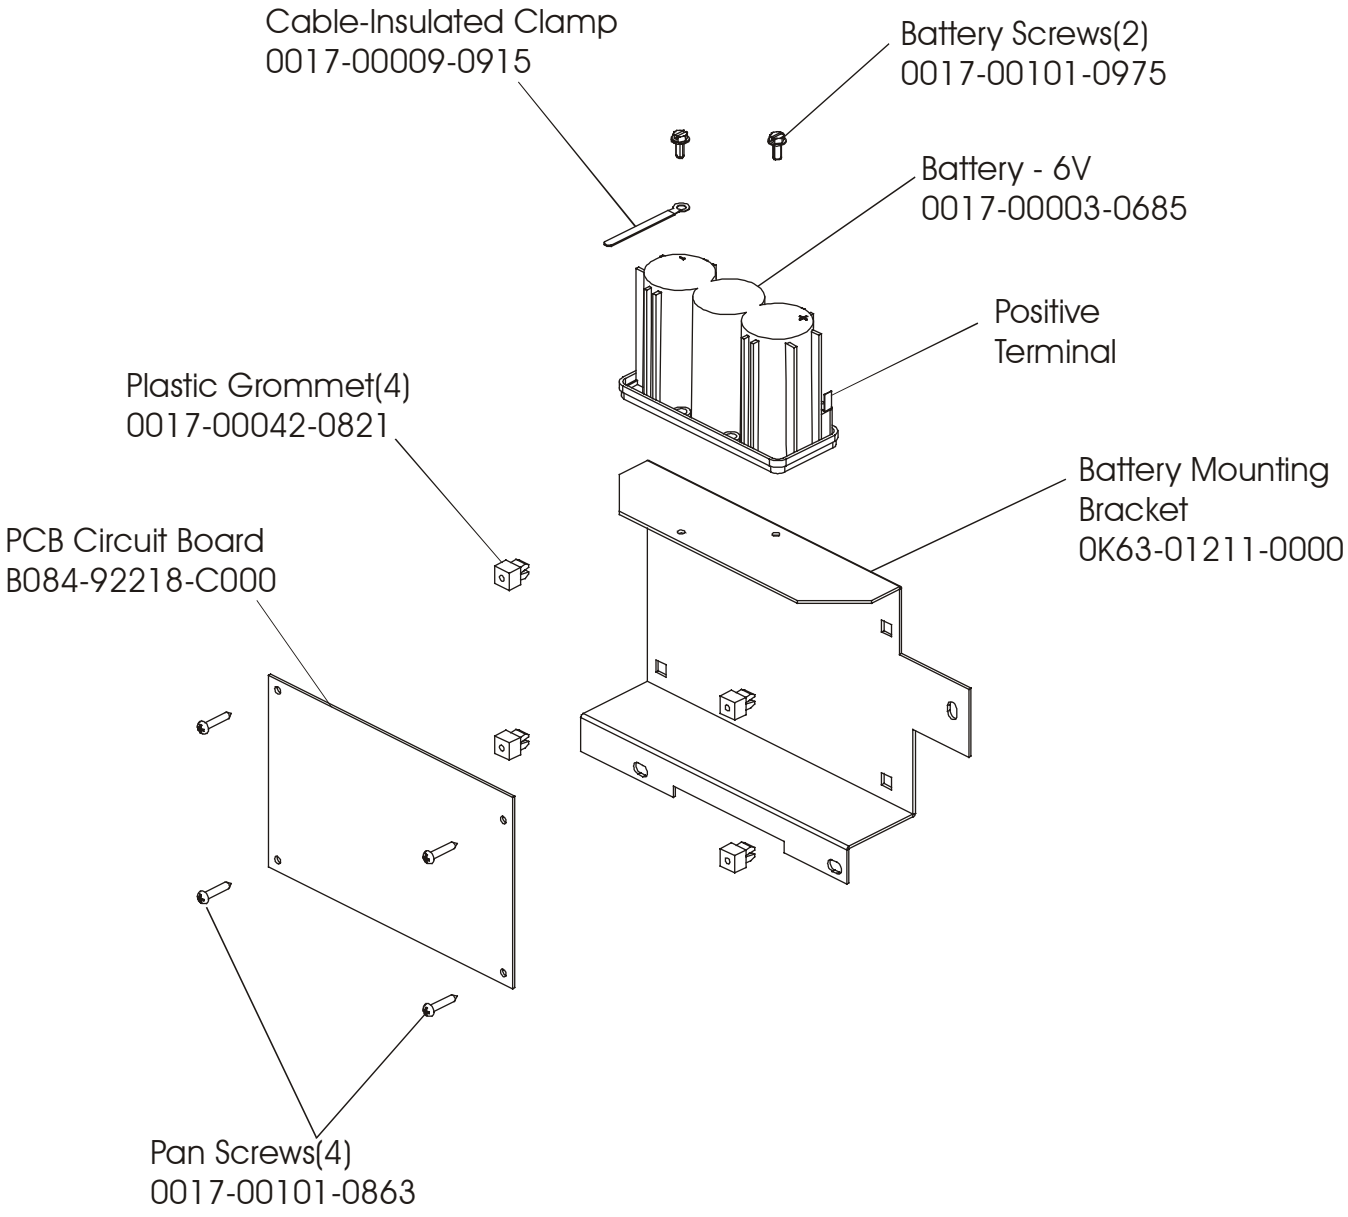
Cable-Insulated Clamp
0017-00009-0915
Battery Screws(2)
0017-00101-0975
Battery - 6V
0017-00003-0685
Positive
Terminal
Plastic Grommet(4)
0017-00042-0821
Battery Mounting
Bracket
0K63-01211-0000
PCB Circuit Board
B084-92218-C000
Pan Screws(4)
0017-00101-0863

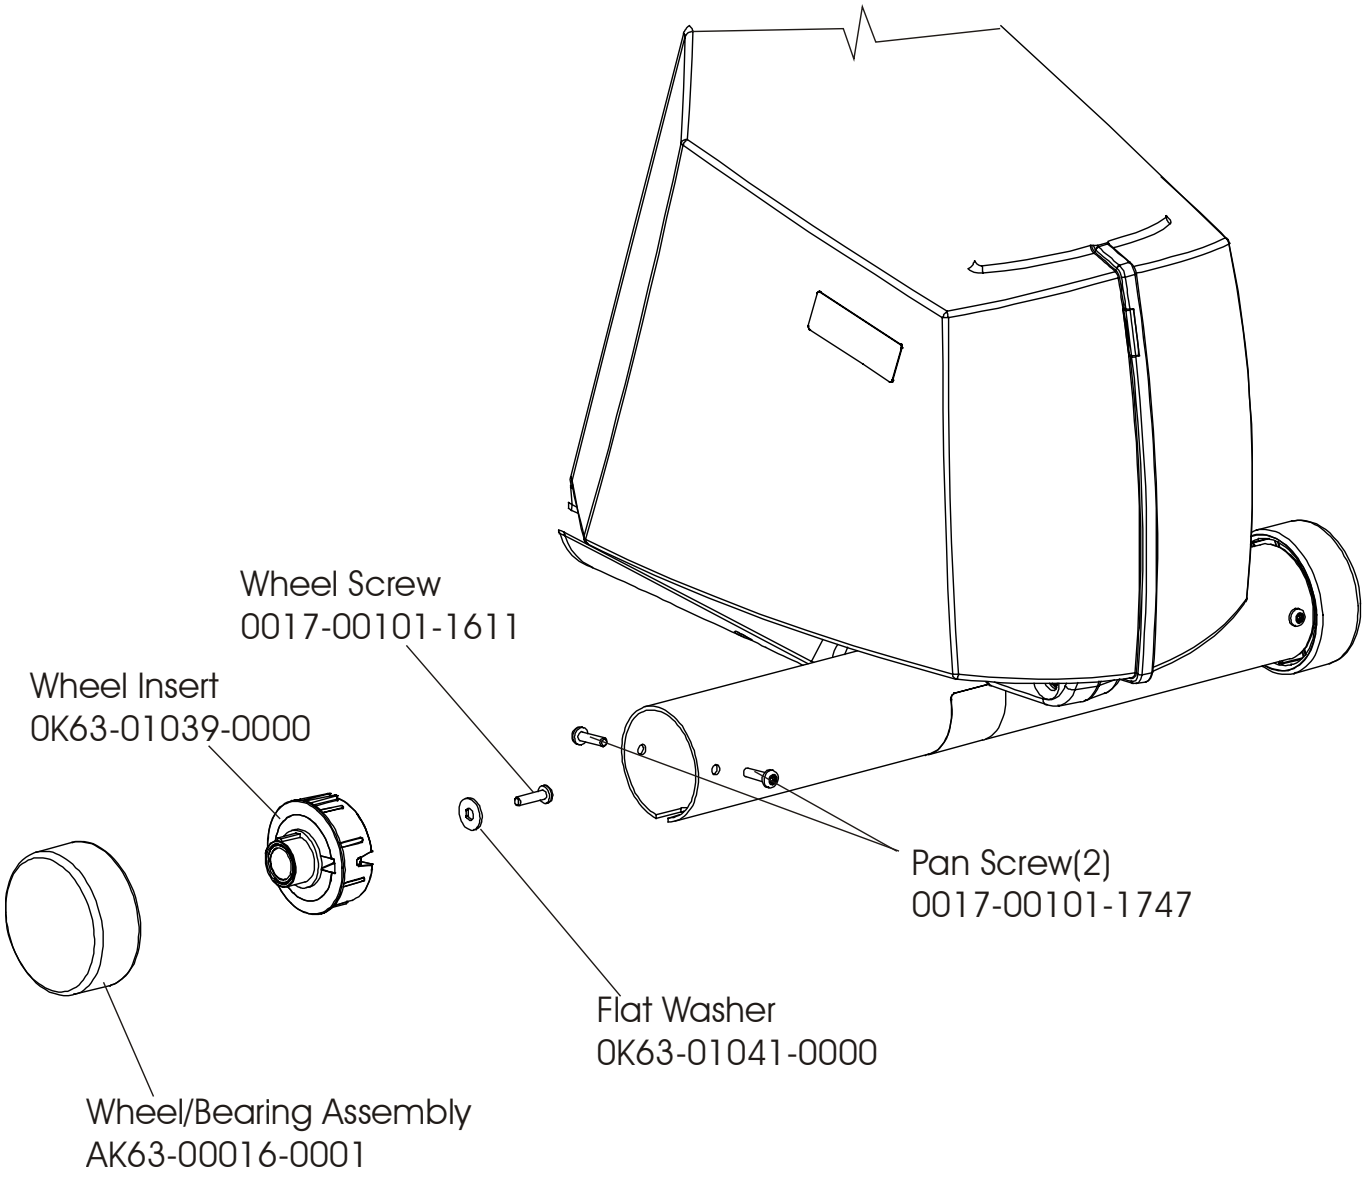
Wheel Screw
0017-00101-1611
Wheel Insert
0K63-01039-0000
Pan Screw(2)
0017-00101-1747
Flat Washer
0K63-01041-0000
Wheel/Bearing Assembly
AK63-00016-0001

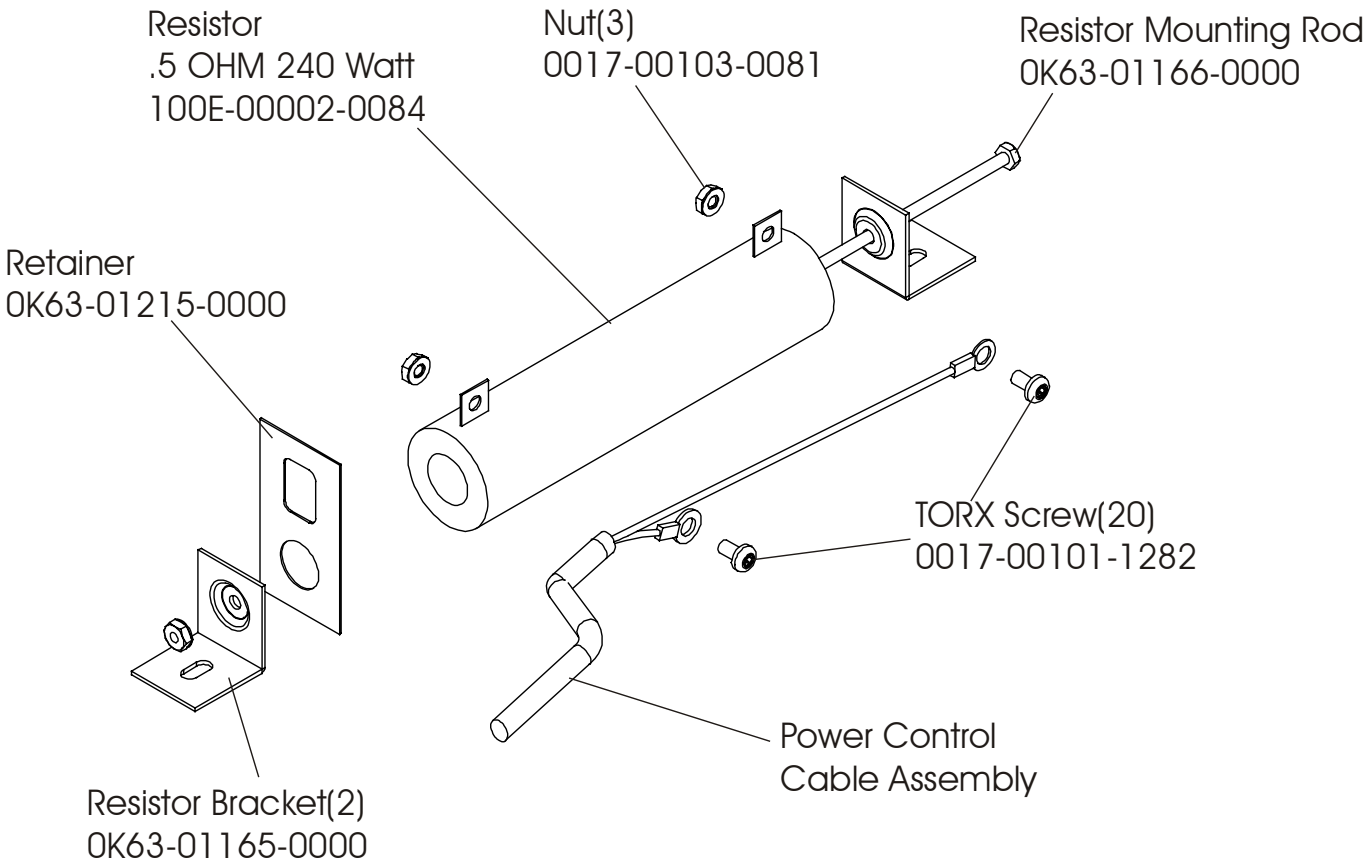
Resistor
.5 OHM 240 Watt
100E-00002-0084
Nut(3)
0017-00103-0081
Resistor Mounting Rod
0K63-01166-0000
Retainer
0K63-01215-0000
TORX Screw(20)
0017-00101-1282
Power Control
Cable Assembly
Resistor Bracket(2)
0K63-01165-0000

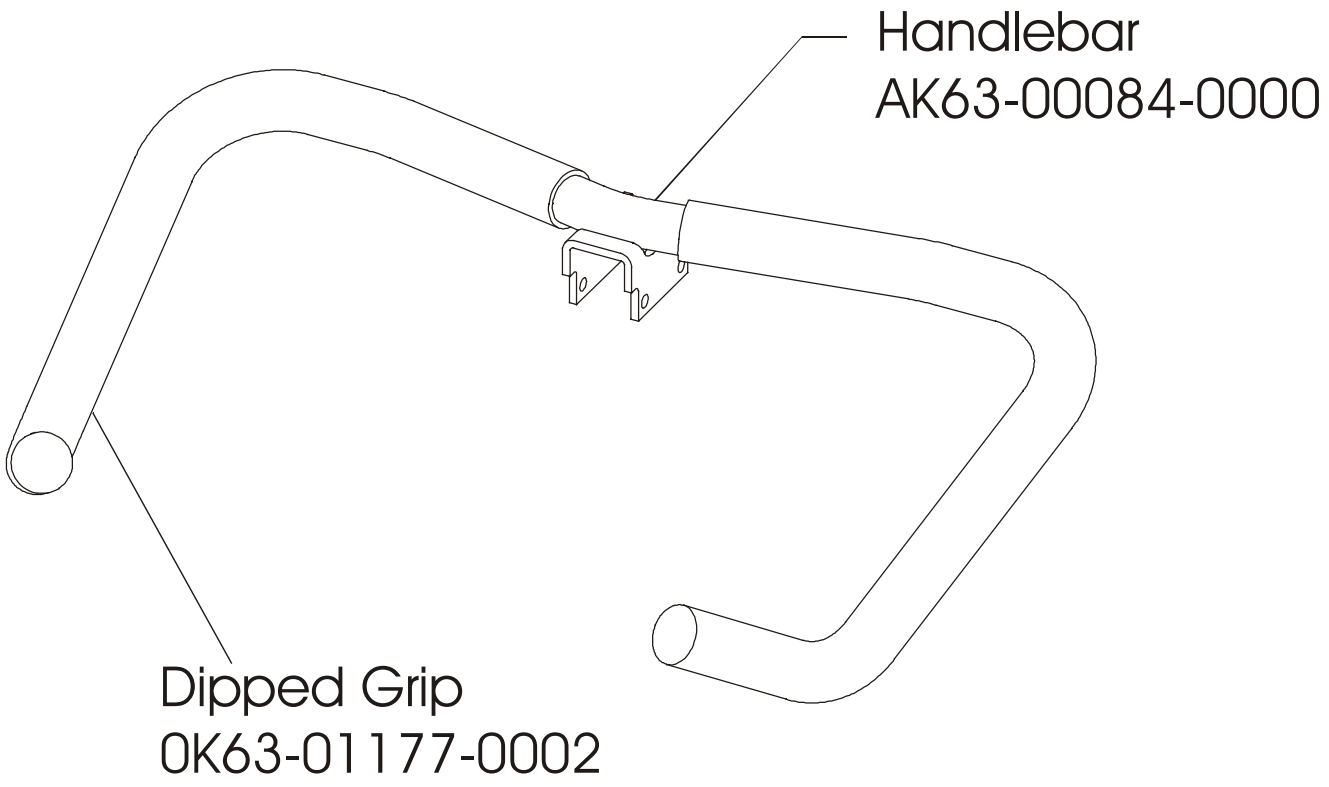
Handlebar
AK63-00084-0000
Dipped Grip
0K63-01177-0002

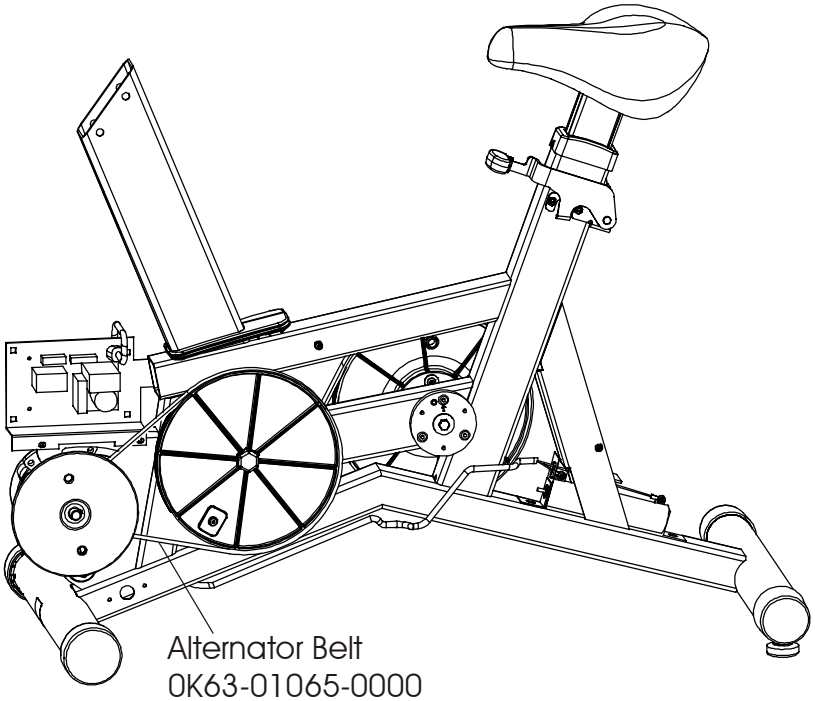
Alternator Belt
0K63-01065-0000

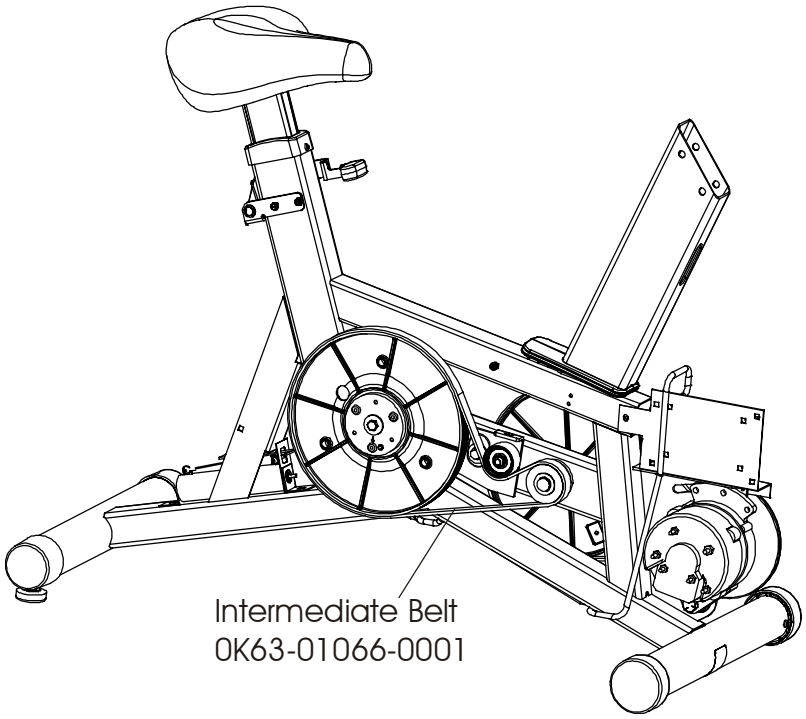
Intermediate Belt
0K63-01066-0001

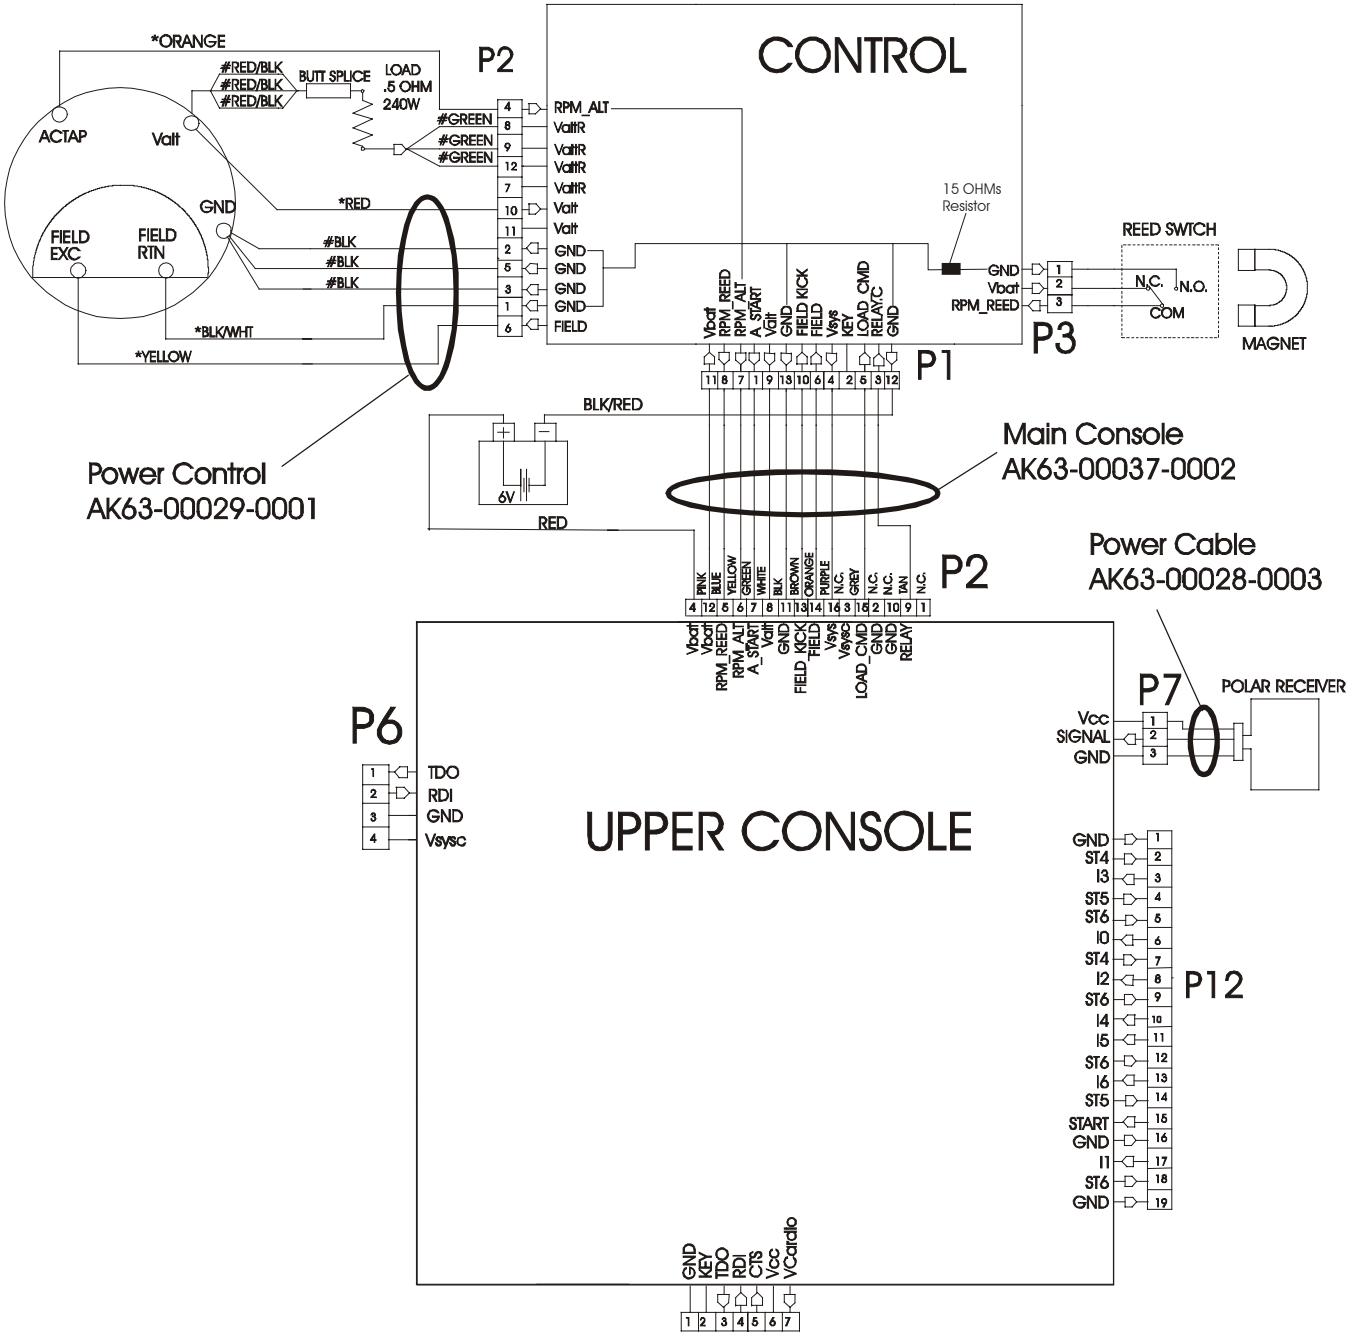
*ORANGE
#RED/BLK
#RED/BLK
#RED/BLK
BUTT SPLICE
LOAD
.5 OHM
240W
ACTAP
Valt
GND
FIELD
EXC
FIELD
RTN
*RED
#BLK
#BLK
#BLK
*BLK/WHT
*YELLOW
#GREEN
#GREEN
#GREEN
P2
CONTROL
RPM_ALT
ValtR
ValtR
ValtR
ValtR
Valt
Valt
GND
GND
GND
GND
FIELD
15 OHMs
Resistor
REED SWITCH
GND
Vbat
RPM_REED
N.C.
N.O.
COM
P3
MAGNET
Vbat
RPM_REED
RPM_ALT
A_START
Valt
GND
FIELD KICK
FIELD
Vsys
KEY
LOAD_CMD
RELAY/C
GND
P1
BLK/RED
6V
RED
Power Control
AK63-00029-0001
Main Console
AK63-00037-0002
PINK
BLUE
YELLOW
GREEN
WHITE
BLK
BROWN
ORANGE
PURPLE
N.C.
GREY
N.C.
N.C.
TAN
N.C.
P2
Vbat
Vbat
RPM_REED
RPM_ALT
A_START
Valt
GND
FIELD_KICK
FIELD
Vsys
Vsysc
LOAD_CMD
GND
GND
RELAY
Power Cable
AK63-00028-0003
P7
POLAR RECEIVER
Vcc
SIGNAL
GND
P6
TDO
RDI
GND
Vsysc
UPPER CONSOLE
GND
ST4
I3
ST5
ST6
I0
ST4
I2
ST6
I4
I5
ST6
I6
ST5
START
GND
I1
ST6
GND
P12
GND
KEY
TDO
RDI
CTS
Vcc
VCardio